Partnership in Solder Technology Innovation

# Lead-Free Solder Paste PF602-P26

Rev. 2017/06/19 Ver. 02-01

## **BASIC OVERVIEW**



BiSn42 Solder Paste Halide Free No Clean Low Melting Point

# **APPLICATIONS**

Low Melting Point Lead-Free SMD Solder Paste Wide Range of Applications and PCB designs

### **FEATURES**

Appearance	Gray paste w/o visible foreign and clusters		
Alloy Composition	BiSn42	JIS-Z-3282	
Melting Point	139 °C		
Particle Size	(Type 3) +45μm < 1% , - 20μm < 10% (Type 4) +38μm < 1% , - 20μm < 10%	J-STD-005	
Powder Shape	Spherical		
Flux Content	10.5 ± 1.0 wt%	JIS-Z-3197, 8.1.2	
Viscosity	180 ± 50 Pa.s (25±1°C, 10rpm, Malcom)	JIS-Z-3284 Annex 6	
Flux Type	ROLO	J-STD-004	

#### Alloy Detail Composition

(Bi)	(Sn)	(Ag)	(Cu)	(Ni)	(Zn)	(Al)	(Sb)	(Fe)	(As)	(Cd)	(Au)	(Pb)
REM.	41~	0.1	0.05	0.01	0.001	0.001	0.05	0.02	0.03	0.002	0.05	0.05
	43	MAX	MAX	MAX	MAX	MAX	MAX	MAX	MAX	MAX	MAX	MAX
												(14/+%)

(wt%)

Scan Code for Solder Paste Documents



www.nevo-solder.com

Partnership in Solder Technology Innovation

Lead-Free Solder Paste PF602-P26

Rev. 2017/06/19 Ver. 02-01

### **PERFORMANCE & RELIABILITY**

Copper Plate Corrosion Test	Pass	IPC-TM-650, 2.6.15
Halogen Content Test	ROLO	BS EN14582
Copper Mirror Test	Pass	IPC-TM-650, 2.3.32
Viscosity Test (25°C,10 rpm)	180 ± 50 Pa.s	JIS-Z-3284. Annex 6
Spreading Test	> 70%	JIS-Z-3197, 8.3.1.1
Tackiness Test (gf)	> 130 (8hr)	JIS-Z-3284. Annex 9
Slump Test	Pass	JIS-Z-3284. Annex 7,8
Solder Ball Test	Pass	JIS-Z-3284. Annex 11


S.I.R. Test	Pass	IPC-TM-650, 2.6.3.3
Electro Migration Test 🛛 🔶	Pass	IPC-TM-650, 2.6.14.1

▲ Test Conditions : 85 °C, 85% RH for 168hrs

•

Test Conditions: 65°C, 88.5% RH for 596 hrs

#### **RECOMMENDED REFLOW PROFILE**

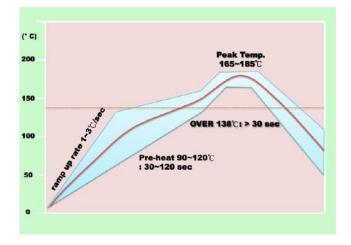

•

Ramp Up Rate (30-90°C):	1.0-3.0 °C/sec
Pre-heating Time (90-120°C):	30-120 sec
Time Period Above 138°C:	>30 sec
Peak Temperature:	165-185 °C
Ramp Down Cooling Rate:	1.0-6.0 °C/sec

Note: The recommended reflow profile is provided as a guideline. Optimal profile may differ due to oven type, assembly layout or other process variables.

Partnership in Solder Technology Innovation

# Lead-Free Solder Paste PF602-P26

Rev. 2017/06/19 Ver. 02-01

# **STORAGE & HANDLING:**

- Refrigerate the solder paste at 0-10°C. Shelf life is 6 months from production date (sealed package).
- Keep away of direct sunlight.
- Allow the paste to reach defined printing temperature (room temperature) for 3-4 hrs. Do not heat up the solder paste rapidly.
- For jars packaging, mix the solder paste before use for 1-3 mins by plastic spatula.
- It is recommended to finish fresh paste within 24 hrs. Do not store used paste and fresh paste in the same jar.
- If printing process was interrupted for more than 1 hour, remove the remained paste from stencil and seal in the jar.
- Recommended printing environment is 22-28°C and RH 30-60% .

Note: For more information, please refer to solder paste application guideline sheet

### **HOW TO ORDER**

# PF602 - P26 - T3 - 500

Solder Alloy PF602 = BiSn42 Flux P26 = ROL0

Particle Size T3 = 20-45μm T4 = 20-38μm

Weight / Packaging
30 = syringe 30g
100 = syringe 100g
150 = syringe 150g
250 = plastic jar 250g
500 = plastic jar 500g
600 = small cartridge 600g
1200 = large cartridge 1200g



SYRINGE

# CONTACTS

#### Tel.: +49-152-5106-5427

support@nevo-solder.com



### www.nevo-solder.com

**NOTICE:** Specifications are subject to change without notice. Contact NeVo<sup>®</sup> for the latest specifications. All statements, information and data given herein are believed to be accurate and reliable, but are presented without guarantee, warranty, or responsibility of any kind, expressed or implied. Statements or suggestions concerning possible use of our product are made without responsibility or warranty that any such use is free of patent infringement and are not recommendations to infringe any patent. The user should not assume that all safety measures are indicated or that other measures are indicated or that measures may not be required. Specifications are typical and may not apply to all applications.

NeVo<sup>®</sup>, Škrobárenská 506/2, 617 00 BRNO, CZECH REPUBLIC